


1. Install frame in wall opening as shown in SECTION VIEW below;
2. Fix frame to wall by using 1-1/2" or longer self-drilling screws (Not included). Use mounting holes located on the inside of the "warm side frame".

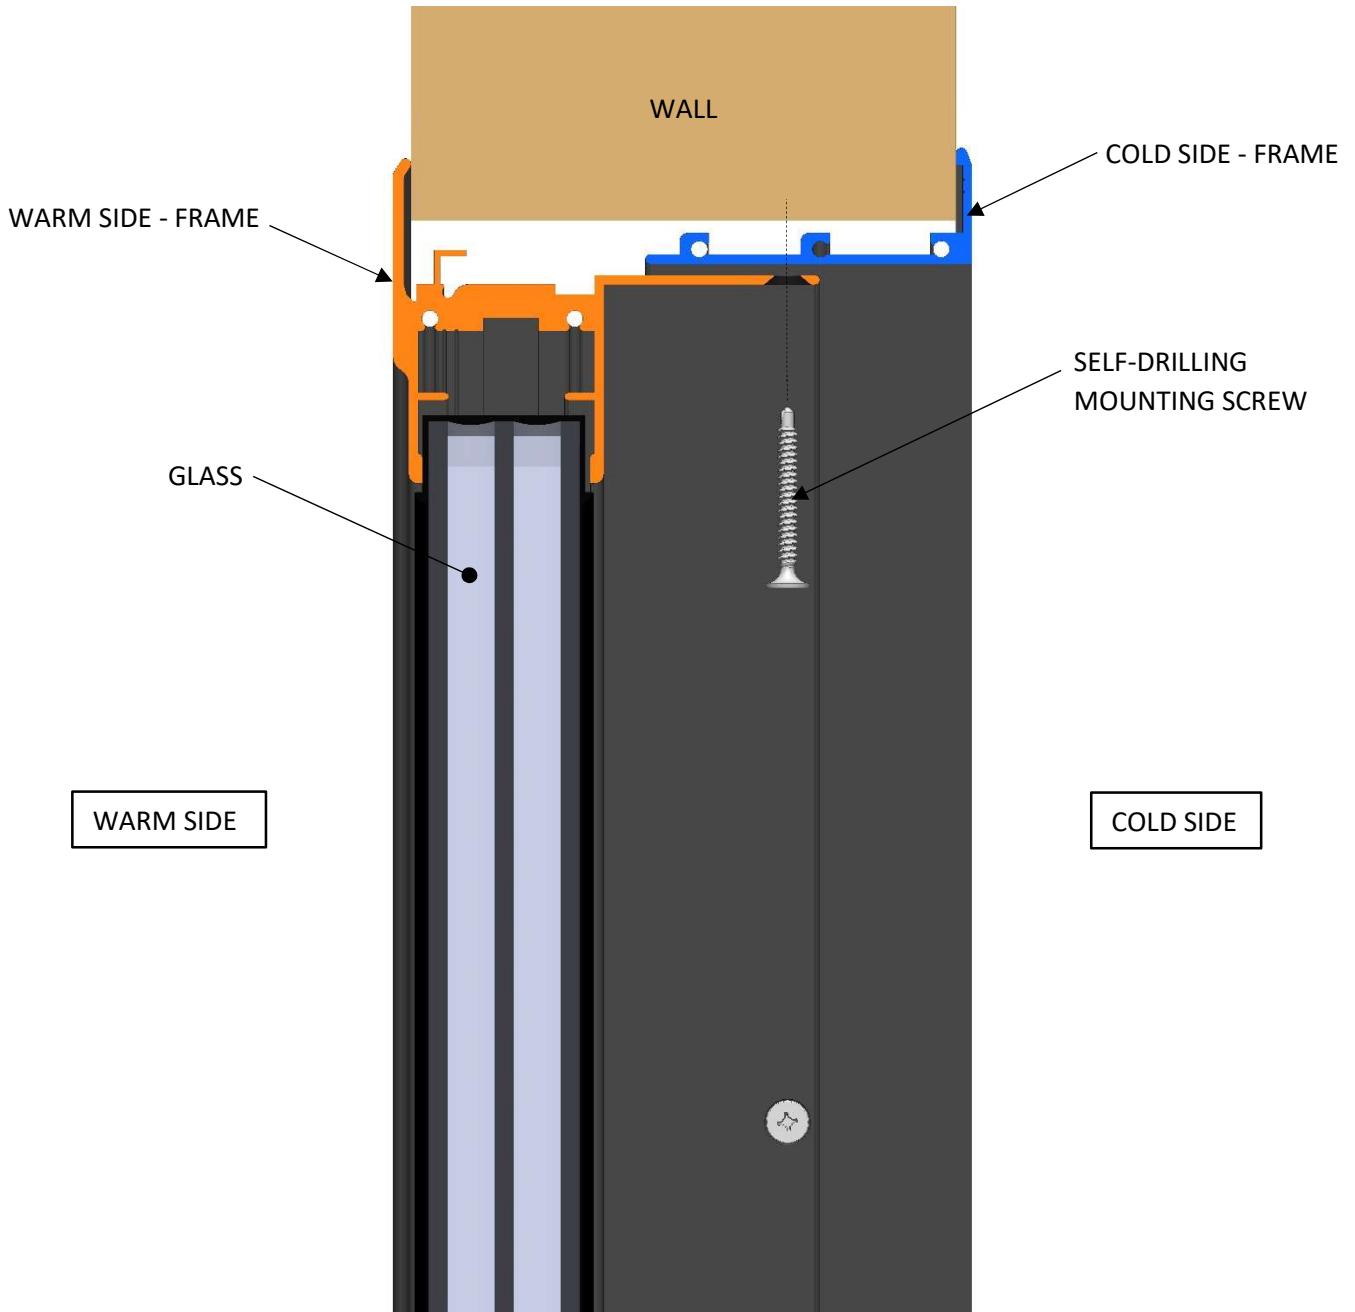

**SECTION VIEW**